

Packard
A Packard BioScience Company

InstantImager[™]
Electronic Autoradiography

REFERENCE MANUAL

InstantImager™ Electronic Autoradiography

Reference Manual



PACKARD INSTRUMENT COMPANY
800 Research Parkway
Meriden, CT 06450
1-800-323-1891
203/238-2351

Documentation Set # 7001155
Printed in U.S.A.
Publication No. 169-4106 Rev. K
© Packard Instrument Co., Inc. 1997

Trademarks Located Within This Publication

- ® DOS and Microsoft Windows are registered trademarks of Microsoft Corporation.
- ® Lotus 1-2-3 is a registered trademark of Lotus Development Corporation.
- ® Superprint is a registered trademark of Zenographics, Inc.

Warranty

United States Only

Thank you for your recent purchase of Packard instrumentation. Packard Instrument Company warrants all new instrumentation of its manufacture to meet Packard specifications and to be free from defects in workmanship and material under normal use for twelve (12) months from the date of installation. If installation is delayed by the customer, then the warranty period shall be thirteen (13) months from the date of shipment.

During the warranty period, Packard, at its option, shall repair or replace defective parts at no charge to the customer.

Modification or alteration of the instrument without prior approval of Packard, or damages from abuse, misuse, or accident will void this and all warranties.

User serviceable components and consumables are not covered by this warranty. Peripheral devices and software not manufactured by Packard are subject to the warranty of the original manufacturer. Parts on liquid handling systems which are in contact with sample liquids, such as tubing, tips, syringes and valves, are excluded from this warranty. Damage to detectors caused by contamination are excluded from this warranty.


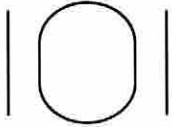
Except as expressly provided above, Packard does not make any warranty of any kind, either expressed or implied, including, but not limited to the implied warranties of merchantability and fitness for a particular purpose.

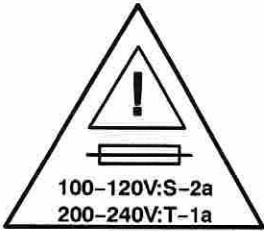
Packard shall not be liable for any direct, indirect, consequential, or incidental damages including damages from loss of business profits, business interruption, loss of business information, and the like arising out of the use or inability to use the product.

Explanation of Symbols used on Packard Equipment

Signification des symboles utilisés sur les instruments Packard

Erklärung der Symbole auf Packard Geräten

Symbol	Symbol	Symboles	Beschreibung
	Alternating current	Courant alternatif	Wechselstrom
	Protective Earth Ground	Mise à la terre	Schutz – Erdung
	On (Supply)	Marche (alimentation)	Ein
	Off (Supply)	Arrêt (alimentation)	Aus
	Caution – Risk of Electrical Shock	Attention: Risque de choc électrique	Vorsicht – Gefährliche Spannung
	Caution (refer to accompanying documents)	Attention: Voir les documents ci-joints	Vorsicht – Siehe Begleitinformation
	Serial Out	Sortie série	Serieller Ausgang
	Printer	Imprimante	Drucker
	Monitor	Moniteur	Bildschirm

Symbol	Symbol	Symboles	Beschreibung
 100-120V:S-2a 200-240V:T-1a	Fuse Label / Current Warning	Étiquette d'avertissement relatif au type et au courant du fusible	Sicherung/ Stromstärke
<u>Warning</u> High Leakage Current Ensure Proper Grounding	<u>Warning</u> High Leakage Current, Ensure Proper Grounding	Avertissement: Courant de fuite élevé, Mettre correctement à la terre	Warnung: Hoher Leckstrom- Ordnungsgemäße Erdung sicherstellen

This equipment must be used only by authorized personnel, in a controlled laboratory environment.

Refer all detailed questions to the Packard Operation and Reference manuals.

This equipment must only be used with IEC listed accessories (computer, printer, monitor, etc.).

The address of the German distributor:

Canberra Packard GmbH
Hahnstr. 70, 2nd Floor
D-6000 Frankfurt 71, Germany

RFI Compliance

This equipment has been tested and found to comply with the limits of VFG 243, VDE 0871 and EN 50 082-1.

Any changes or modifications not expressly approved by Packard Instrument Company could adversely affect compliance.

Use only shielded interface cables with this equipment.

If the instrument is received in a damaged condition, request an immediate inspection by the carrier and local technical service representative. Packard is not responsible for damage occurring during transit. However, Packard will assist in ensuring a satisfactory settlement from the carrier.

Upon receipt of all damage/inspection reports, Packard will arrange for either instrument repair or replacement.

For proper ventilation of this equipment, a distance of 15cm must be maintained from this unit to any other surface.

Ce matériel doit être utilisé seul par Personnel autorisé, a commandé dans un l'environnement du Laboratoire.

Reportez à toutes questions détaillées au PACKARD Opération et manuels de la Référence.

Reportez à tout service, a formé à un PACKARD le personnel du service seul.

Ce matériel, faut seul est utilisé avec IEC a Inscrit des Accessoires. (Ordinateur, Imprimeur, Moniteur, [etc])

L'Adresse du Distributeur allemand.

Canberra Packard GmbH
Hahnstr. 70, Deuxième étage
D-6000 Frankfurt 71, Allemande

RFI Acquiescement

Ce matériel a été testé et a trouvé conformer à avec les limites de VFG 243, VDE 0871 et En 50 082-1.

Tous changements ou modifications pas expressément approuvé Instrumente par PACKARD pouvait, [incorrigible] effectue l'acquiescement.

Utilisez seul a protégé des câbles de l'interface avec ce matériel.

Si l'instrument est reçu dans une condition endommagée, demande une inspection immédiate par le porteur et représentant du service local technique. PACKARD n'est pas responsable pour dégât produit pendant passage. De quelque manière que, PACKARD aidera dans assurer un règlement satisfaisant du porteur.

Rapporte sur reçu de toute inspection du dégât, PACKARD arrangera la réparation de l'instrument a l'un ou l'autre ou remise en place.

Pour ventilation adéquate de ce matériel, une distance de 15cm doit être maintenue, de cette unité à toute autre surface.

Bitte nur gleichwertige Ersatzsicherungen des angegebenen Typs verwenden.

Das Gerät erst nach der Einarbeitung durch einen von Packard geschulten Vertreter benutzen.

Reparatur- und Servicearbeiten sind nur von durch Packard geschulten Personen durchzuführen.

An das Gerät darf nur IEC-registriertes Zubehör angeschlossen werden (Computer, Drucker, Monitor usw.).

Vertriebsadresse in Deutschland:

Canberra Packard GmbH
Hahnstr. 70, 2. Stock
D-6000 Frankfurt 71

Funkentstörung

Das Gerät wurde getestet und entspricht den Vorschriften von VFG 243, VDE 0871 und EN 50 082-1.

Durch Änderungen oder Umbauten, die nicht ausdrücklich von Packard Instrument genehmigt wurden, wird die Zulassung u.U. hinfällig.

Mit diesem Gerät nur isolierte Schnittstellenkabel verwenden.

Weist das Gerät bei der Entgegennahme Schäden auf, verlangen Sie bitte eine sofortige Inspektion durch den Spediteur und den zuständigen Kundendienstvertreter. Packard ist für Transportschäden nicht haftbar, setzt sich jedoch gern dafür ein, mit dem Spediteur eine befriedigende Lösung auszuarbeiten.

Nach Eingang aller Schadens- und Inspektionsberichte veranlaßt Packard entweder die Reparatur oder den Umtausch des Geräts.

Für ordnungsgemäße Ventilation darf dieses Gerät nicht näher als 15cm von einer Wand entfernt aufgestellt werden.

Chapter 1

About the System

How the Manual is Organized	R1
Selecting and Choosing a Menu	R2
Choosing a Menu Item	R2
Keyboard Shortcuts	R2
Standard Terms and Conventions	R3
Menu Conventions	R4
Notational Conventions	R5
About the InstantImager	R6
The InstantImager Concept	R7
Overview of the System Hardware	R8
Sample Drawer and Related Accessories	R10
Instrument Specifications	R12
Physical Dimensions	R12
Electrical Requirements	R12
Environmental Requirements	R12
Detector	R13
Gas Requirements	R13
Gas Pressure	R13
Typical Performance Specifications	R14
Efficiency of Detection	R14
Linearity of Response	R14
Background	R15
Detection Threshold 14C	R15
Uniformity	R15
Resolution	R15

Chapter 2

The System Software

The System Software	R17
About Windows	R17
Components of a Window	R18
Working with the Mouse	R20
The InstantImager Software	R24
Menus and Selections	R27
File Menu	R27
Transform Menu	R30
View Menu	R32
Analysis Menu	R34
Acquisition Menu	R36
System Menu	R37
Tasks Menu	R38

Chapter 3

By Window

Chapter Organization	R39
System Flowchart	R39
About InstantImager Window	R42
Acquisition Continue Parameters Window	R43
Acquisition Start Parameters Window	R44
Add Standard to List Window	R46
Create Template Window	R48
Custom Palette Window	R50
Display Window	R52
Edit Acquisition Protocol File Window	R55
Edit Arrow Window	R59
Edit Current Protocol Window	R61
Edit Group of Regions Window	R64
Edit Lane Points Window	R68
Edit Region Window	R71
Edit Time Series	R74

File Export Window	R76
Find Regions Window	R79
Font Window	R83
Grid Report Options Window	R86
Grid Template Parameters Window	R89
Image Information Window	R92
Imager Users Window	R94
InstantImager Window	R97
Lane Group Report Options Window (2D Regions)	R100
Lane Template Parameters Window	R104
Load Acquisition Protocol Window	R107
Load Template Window	R109
Mark Standard Window	R111
Molecular Weight Standard Curve Window	R113
Open Image Window	R114
Print Window	R116
Region Group Report Options Window	R119
Rescale Bitmap Window	R122
Save Image As Window	R125
Save Report As Window	R127
Save Template As Window	R130
Select Molecular Weight Standards Window	R132
Smooth Parameters Window	R134
Standard Curve Parameters Window	R136
System Operator Window	R138
Task List Window	R141
Template Report Window	R143
Text Annotation Window	R145
Time Series (Space Warning)	R147
User Information Window	R148
User Preferences Window	R151
Users Images Window	R154
Which Protocol to Edit Window	R156

Chapter 4

Alphabetical

Introduction	R159
Alphabetical Reference List	R159

Chapter 5

Using Grids

Using Grids	R207
Using the Grid Template Parameters Window	R210
Editing Grids Graphically	R212
Move/Copy the Template	R212
Rotate the Template	R213
Resize the Grid	R213
Resize the Cells	R214
Editing Grids Numerically	R215
Background Subtraction	R215
Background Regions	R215
Background Cells	R216
Reporting Results	R217

Chapter 6

Using Groups of Regions

Using Groups of Regions	R219
Region Drawing Tools	R224
Rectangle Drawing Tool	R225
Ellipse Drawing Tool	R225
Irregular Drawing Tool	R225
ROI Drawing Tool	R226
Qualifier Buttons	R226
Labeling Regions	R227
Editing Regions	R228
Editing Regions Graphically	R231
Moving and Copying Groups of Regions	R231
Resizing Regions	R231
Finding Regions Automatically	R232
How to Find Regions Automatically	R234
Creating a Region of Interest	R237
Reporting Region Groups	R237

Chapter 7

Using Lanes

Using Lanes	R239
Creating a Lane Template	R240
Editing Lane Templates Graphically	R244
Moving and Copying the Template	R244
Resizing Width and Height	R244
Resize the Length	R245
Rotate the Template	R245
Editing Individual Lanes Graphically	R246
Moving the Lane	R246
Resizing the Lane Width	R247
Curving the Lane	R247

Selecting Objects in Lane Templates	R248
Drawing Regions in Lanes	R250
Rectangle Drawing Tool	R251
Ellipse Drawing Tool	R251
Irregular Drawing Tool	R251
Band Mark Tool	R252
Profile Drawing Tool	R252
Qualifier Buttons	R253
Editing Regions in Lanes	R254
Selecting a Region	R254
Moving or Copying the Region	R254
Resizing the Region	R255
Deleting a Region	R255
Labeling Lanes and Regions	R255
Profile Analysis	R256
Adjusting the Template	R256
Determining Molecular Weights	R257
Deleting a Standard From the List	R258
Adding Standards to the List	R259
Molecular Weight Standard Curve	R261
Editing Lane Points	R265
Changing Lane Point Types	R266
Changing Molecular Weights Individually	R266
Changing Molecular Weights Using the List	R267
Reporting Lane Templates	R268

Chapter 8

Profile (1D) Analysis

Profile (1D) Analysis	R269
Interface Between 2D Image and Profile (1D) Image	R269
The Profile Frame Window	R270
Profile Window	R271
The Toolbox	R275
Cursor Readout	R275
The Display Area	R275
The Analysis Area	R277
Template Bar	R279
Menus and Selections	R279
File Menu	R282
View Menu	R284
Analysis Menu	R286
Window Menu	R288
Tasks Menu	R289
File Menu Functions	R290
Export Profile Data	R290
Export Profile Display	R293
Print Profile Display	R295
View Menu Functions	R297
Profile Axes	R298
Peak Tags	R301
The Font Window	R304
Profile Display Mode	R306
Smooth Profile	R308
Analysis Menu Functions	R310
How to Find Peaks and Background	R310
Editing Profile Regions and Background	R315
Editing Lanes	R317
Changing Molecular Weights Using the List	R321
Reporting Lane Profiles	R323

Chapter 9

Printing Images

Printing Images	R335
Printing a Selected Region	R339
The Printed Image	R340

Chapter 10

Reporting Results

Reporting Grids	R343
Using the Grid Report Options Window	R344
The Grid Template Report	R347
Reporting Regions	R350
Using the Group Report Options Window	R351
The Region Template Report	R355
Reporting Lanes	R357
Using the Lane Group Report Options Window	R357
The Lane Template Report	R362
Using the Template Report Window	R364

Chapter 11

Maintenance and Troubleshooting

Corrective Maintenance Troubleshooting	R367
System Message Troubleshooting	R369
Replacing the Gas Bottle	R374
Gas Requirements	R375
Gas Pressure	R375
Gas Bottle Hazards	R375
Electrical and Mechanical Hazards	R376
Decontaminating Sample Drawer Accessories	R376
Starting and Stopping the Instrument	R376
Adding New Users	R377
How To Add a User	R377
Editing a User	R379
Viewing User Images	R380
Deleting Images	R381
Setting User Preferences	R382
User Administration	R385
Backing Up Images	R388
Software Installation	R388
When Installing Windows	R388
How to Install the InstantImager Software	R389
High Memory and the DSP	R390

Chapter 12

Calibration

Calibration	R391
What Calibration Adjusts	R391
Calibration Frequency	R392
How to Calibrate the Instrument	R393
Calibration Completed	R394
The Calibration Source	R394

Appendix A

Long Term Storage

Long Term Storage	R395
Storing the InstantImager	R395
Preparing the InstantImager for Use	R395